



Roller Shade - Curved Cassette & Compact Curved Cassette

Installation Instructions





WARNING

- Cords and bead chains can loop around a child's neck and STRANGLE.
- Always keep cords and bead chains out of children's reach.
- Move furniture away from cords and bead chains. Children can climb furniture to get to cords.



1 PREPARATION

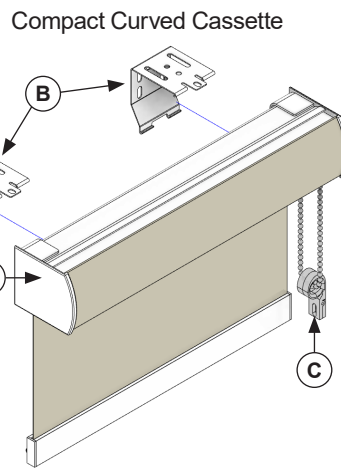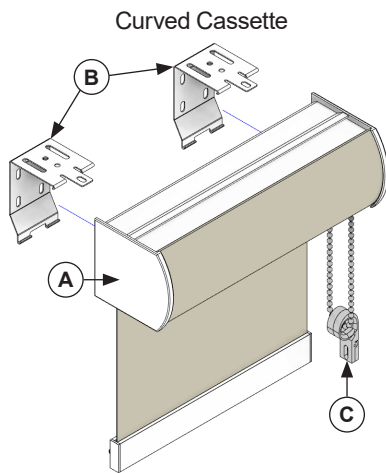

Component List

- A. Shade
- B. Mounting Brackets
- C. Chain Tension Device

2 DETERMINE NUMBER OF BRACKETS

Shade Width	<60"	60" to 96"	96" to 120"	120" to 148"	>148"
# of Brackets	2	3	4	5	6


- Determine the proper position for each bracket. The outside brackets should be no further than 2" from the ends of the cassette.
- The brackets should be securely mounted and equally spaced for the width of the shade.
- It is important that the mounting brackets be installed level and aligned to each other. Shimming may be required.

3

MOUNT THE BRACKETS


CEILING MOUNT

For ceiling mount applications, please ensure that you leave a 1/4" between the wall and the mounting bracket to facilitate mounting and dismantling.

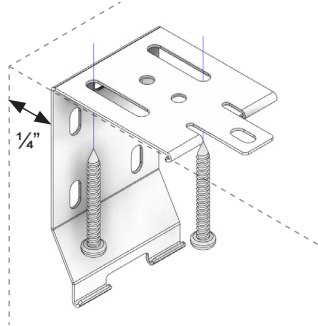

WALL MOUNT

For wall mount applications, please ensure that you leave a 1/4" between the ceiling and the mounting bracket to facilitate mounting and dismantling.


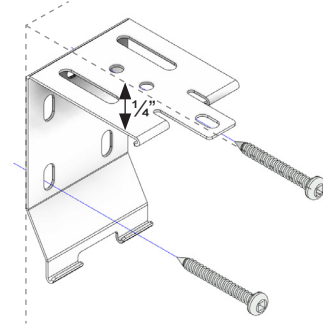


* 50mm bracket may vary in shape

4

INSTALL THE SHADE

- With the curved face of the cassette facing you, (1) insert the back edge of the cassette onto the bottom of each mounting bracket, as shown below.
- (2) Starting from the center of the shade, push the cassette back and up until the cassette snaps into the top tab of the mounting bracket.
- (3) You should hear an audible click as the cassette snaps in to the mounting brackets. Repeat this process for each bracket.

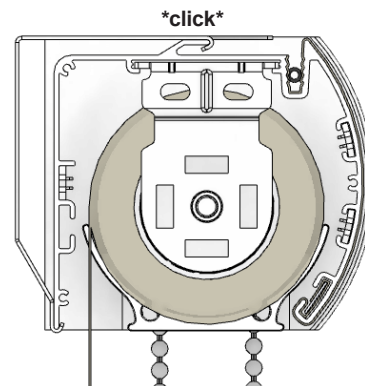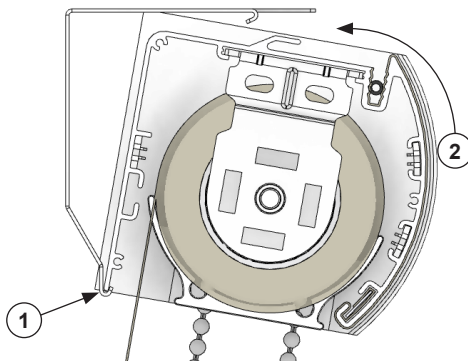

3

INSTALL THE CHAIN TENSION DEVICE

Ensure the chain tension device is carefully and properly installed.

