




# Decora Shade Installation Instructions


1/12/2016

## STEP 1: MOUNT THE BRACKETS


- Determine the proper position for each bracket. The outside brackets should be no further than 2" from the ends of the Decora cassette.
- The brackets should be securely mounted and equally spaced for the width of the Decora Shade.
- Depending on site conditions attach the shade using two mounting screws.
- All screws should be securely fastened to a sturdy structure.
- It is important that the mounting brackets be installed level and aligned to each other. Shimming may be required.
- The standard mounting brackets provided are as follows: 2 for widths up to 60", 3 between 61" to 96", 4 or more over 96".

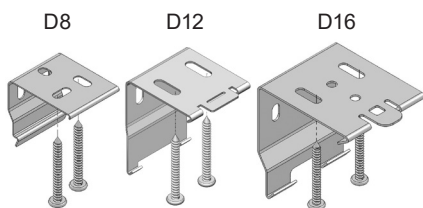

Ceiling/inside mount

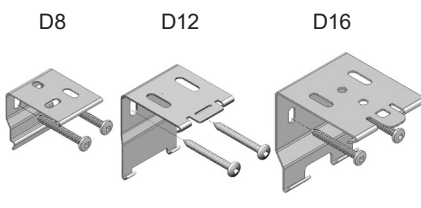

Wall/outside mount

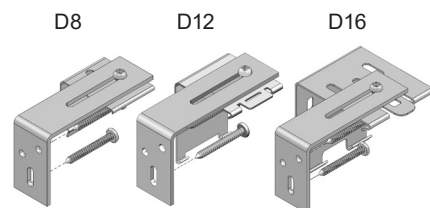

Lateral mount



**FOR CEILING MOUNT LEAVE MINIMUM 1/4" GAP IN BETWEEN BRACKET AND WALL FOR EASY MOUNTING OR REMOVING OF THE SHADE.**




**FOR WALL MOUNT LEAVE MINIMUM 1/4" GAP IN BETWEEN BRACKET AND CEILING FOR EASY MOUNTING OR DISMOUNTING.**

## STEP 2A: INSTALL THE SHADE (WALL MOUNT)


- With the curved face of the cover facing you, insert the front edge of the headrail onto the top of each mounting bracket, as shown below.
- Starting from the center of the shade, push upward and twist until the back edge of the decora cover snaps into the bottom tab of the mounting bracket. Repeat this process for each bracket.




**MAKE SURE THAT THE LIP OF THE MOUNTING BRACKET FIRMLY CLICKS INTO THE GROOVE.**

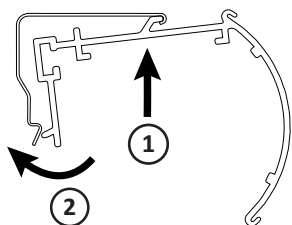

Decora 8: Wall Mounting

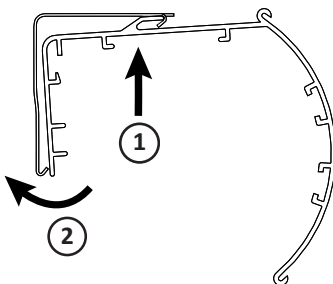

Decora 12: Wall Mounting

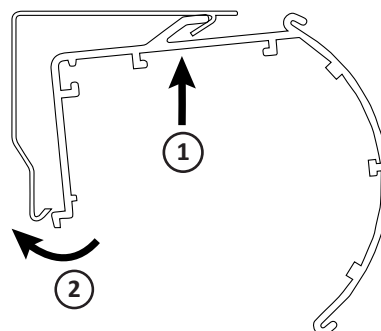


Decora 16: Wall Mounting

## STEP 2B: INSTALL THE SHADE (CEILING & LATERAL MOUNT)


- With the curved face of the cover facing you, insert the back edge of the headrail onto the bottom of each mounting bracket, as shown below.
- Starting from the center of the shade, push back and twist up until the front edge of the decora cover snaps into the top tab of the mounting bracket. Repeat this process for each bracket.




**MAKE SURE THAT THE LIP OF THE MOUNTING BRACKET FIRMLY CLICKS INTO THE GROOVE.**

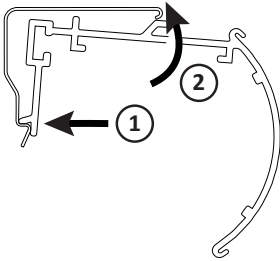

**Decora 8:**  
Ceiling & Lateral Mounting

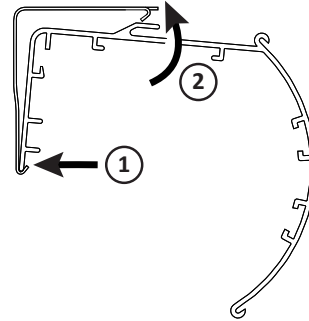

**Decora 12:**  
Ceiling & Lateral Mounting

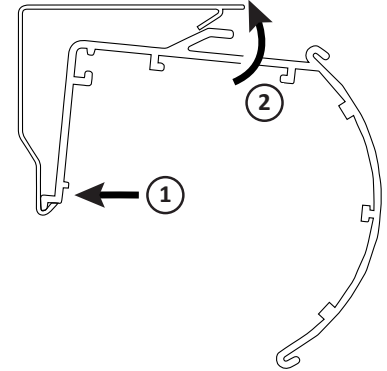

**Decora 16:**  
Ceiling & Lateral Mounting

## STEP 3: OPERATE THE SHADE

**Chain Operated Shades:** Use the control chain to lower or raise the fabric to insure a proper installation. Do not lift the bottom rail with your hand.

**NeoShade™ Chainless Shades:** Gently pull the bottom bar from the centre to lower or raise the shade. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly.




**Automated Shades:** For testing and setting up programming refer to the instructions provided with the packaged control/remote.


## STEP 4: TO REMOVE THE SHADE

- To remove wall mounted shades for **Decora 8,12 & 16**, reverse the steps used in **STEP 2A**, as shown in **Figure A** below.
- To remove ceiling and lateral mounted shades for **Decora 8,12 & 16**, reverse the steps used in **STEP 2B**, as shown in **Figure B** below.

**Figure A**

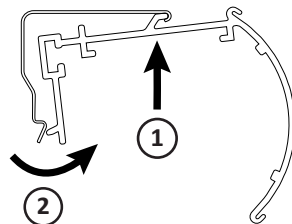

**Figure B**

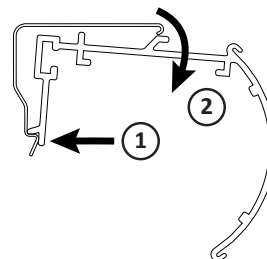

**DEPENDING ON MOUNTING CONDITIONS, A FLAT HEAD SCREW DRIVER MAY BE REQUIRED TO DISENGAGE THE CASSETTE FROM THE MOUNTING BRACKET.**