


SG Automation Remotes: 1 Channel

Programming Instructions

1 BUTTONS

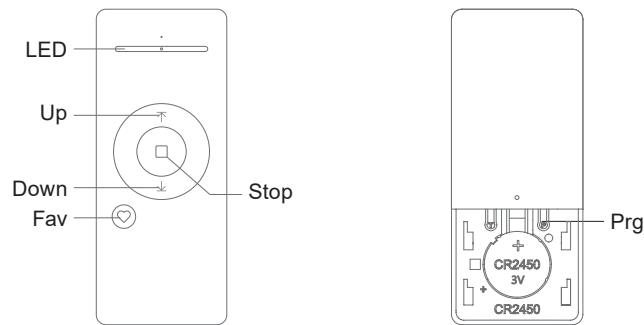

2 MODELS & PARAMETERS

For more information, please refer to the nameplate.

Electrical Specification	Standard
Battery Type	CR2450, 3V x1
Working Temperature	-10 °C to 50°C
Radio Frequency	433.92M ±KHz
Transmit Distance	>= 30m indoors

Caution:

1. The remote control should not be exposed to moisture or impact, so as not to affect its life.
2. During use, when the effective remote control distance appears significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the battery voltage is too low, the orange LED will flicker during operation.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

3 INSTRUCTIONS

How To Prohibit Dual-Key Operation:

1.

Prg for 10s

LED flicker

Dual-key operation is prohibited
2. Repeat the above, dual-key operation is re-activated.

Note: When dual-key operation is prohibited, programming setting functions are not allowed.


For other operations, please refer to the applicable motor operation instructions.

SG Télécommandes d'automatisation: 1 canal

Instructions de programmation

1

BOUTONS

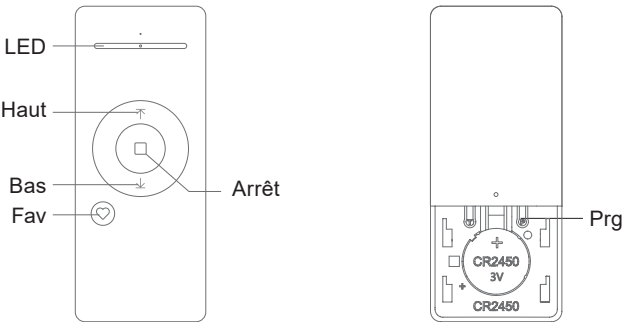

2

MODÈLES ET PARAMÈTRES

Pour plus d'informations, veuillez consulter la plaque signalétique.

Caractéristiques électriques	Standard
Type de batterie	CR2450, 3V x1
Température de fonctionnement	-10 °C to 50°C
Radiofréquence	433.92M ±KHz
Portée de transmission	>= 30m à l'intérieur

Attention:

1. La télécommande ne doit pas être exposée à l'humidité ni à des chocs, afin de ne pas nuire à sa durée de vie.
2. Si, lors de son utilisation, la portée effective de la télécommande semble nettement réduite ou si celle-ci semble moins réactive, veuillez vérifier si la pile doit être remplacée.
3. Lorsque la tension de la pile est trop faible, la LED orange clignote pendant le fonctionnement.
4. Veuillez éliminer les piles usagées conformément aux règles locales en matière de tri sélectif et de recyclage.

3

INSTRUCTIONS

Comment désactiver le fonctionnement à double clé:

1.

Appuyez sur Prg pendant 10s

Scintillement des LED

L'utilisation simultanée de deux clés est interdite

2.

Répétez l'opération ci-dessus pour réactiver le fonctionnement à deux touches.

Remarque: lorsque le fonctionnement à double touche est interdit, les fonctions de programmation ne sont pas autorisées.

Pour les autres opérations, veuillez vous reporter au mode d'emploi du moteur concerné.