


Neo Chainless Roller Shade

Installation Instructions


1 DETERMINE THE POSITION OF THE BRACKETS

- Determine the proper position for each bracket. The outside brackets should be no further than 2" from the ends of the cassette.
- The brackets should be securely mounted and equally spaced for the width of the shade.
- It is important that the mounting brackets be installed level and aligned to each other. Shimming may be required.

CEILING MOUNT

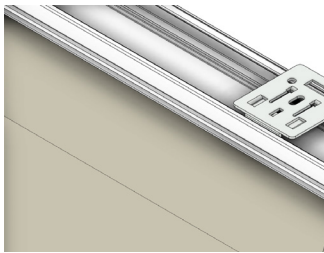


WALL MOUNT

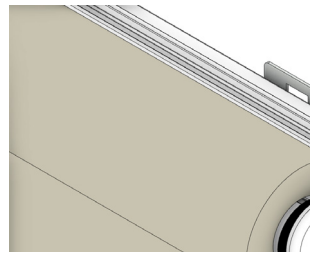

2 INSTALL MOUNTING BRACKETS


CEILING MOUNT

For ceiling mount applications, please ensure that you leave enough room to clear the roll between the wall and the mounting bracket to facilitate mounting and dismounting.

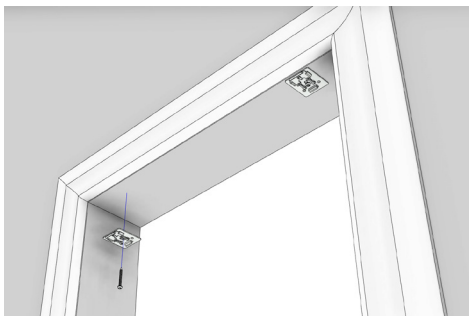



WALL MOUNT

For wall mount applications, please ensure that you leave enough room to clear the roll between the wall and the mounting bracket to facilitate mounting and dismounting.

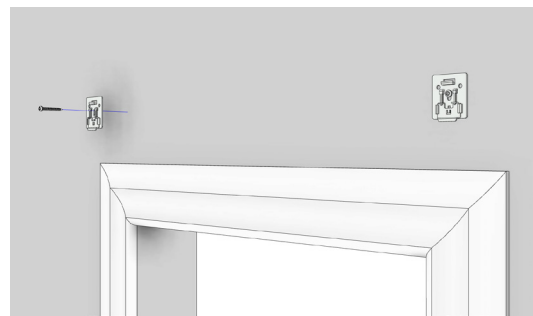

3 INSTALL THE PRODUCT

1. Insert the headrail edge onto the spring-loaded mounting bracket and push toward the back.
 2. Turn upward until the opposite headrail edge is locked onto the back tab on the mounting bracket.
- Repeat this process for wall mounted applications as shown below.

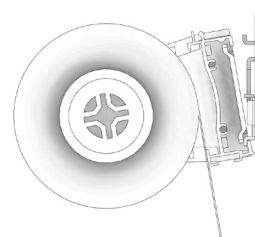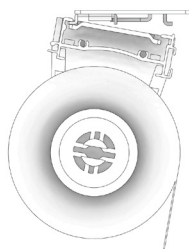


Neo Store Enrouleur sans Chaîne

Instructions d'Installation


1 DÉTERMINEZ LA POSITION DES SUPPORTS

- Déterminez la position appropriée pour chaque support. Les supports extérieurs ne doivent pas être situés à plus de 2 po des extrémités de la cassette.
- Les supports doivent être solidement fixés et espacés de manière égale sur toute la largeur du store.
- Il est important que les supports de montage soient installés de niveau et alignés entre eux. Des cales peuvent être nécessaires.

SUPPORT DE PLAFOND

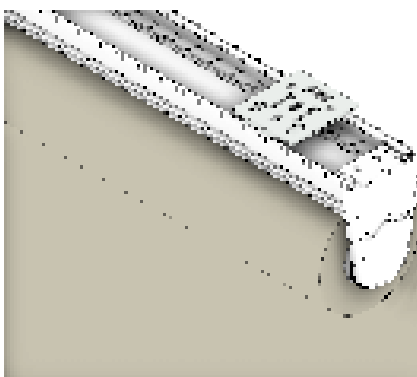


SUPPORT MURAL

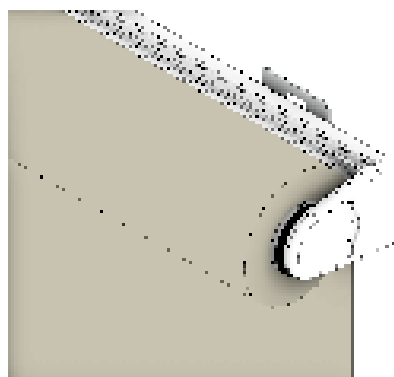

2 INSTALLEZ LES SUPPORTS DE MONTAGE


SUPPORT DE PLAFOND

Pour les installations au plafond, veuillez vous assurer de laisser suffisamment d'espace pour

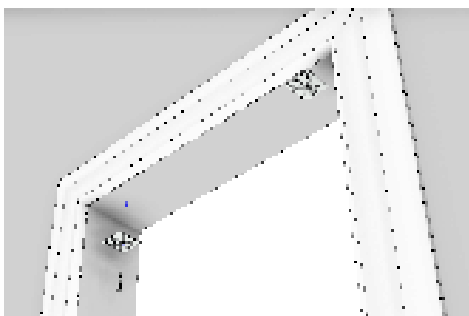

SUPPORT MURAL

Pour les installations murales, veuillez vous assurer de laisser suffisamment d'espace pour dégager

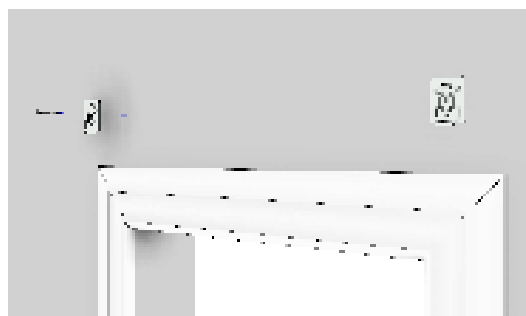

3 INSTALLEZ LE PRODUIT

1. Insérez le bord du rail supérieur dans le support de montage à ressort et poussez vers l'arrière.
2. Faites pivoter vers le haut jusqu'à ce que l'autre bord du rail supérieur s'enclenche sur la languette

