

Cellular Shade

Installation Instructions



WARNING

STRANGULATION HAZARD — Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.



MISE EN GARDE


RISQUE D'ÉTRANGLEMENT — Les enfants en bas âge peuvent s'étrangler avec des cordes. Enlevez immédiatement ce produit si une corde mesurant plus de 22 cm devient accessible ou si le contour d'une boucle de plus de 44 cm devient accessible.

For no-drill installation, please refer to page 3 & 4.

1

PREPARATION

Make sure the mounting surface is clean, level, and ready for installation.

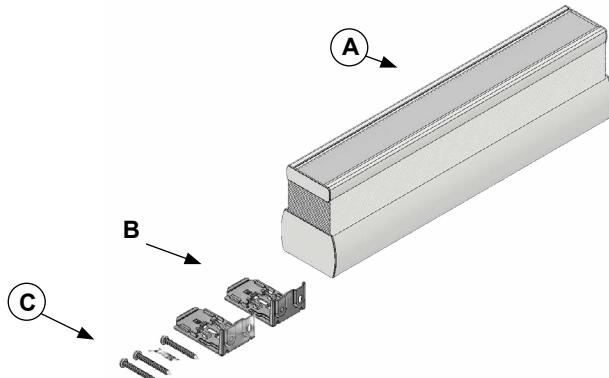

Component List

- A. Shade
- B. Mounting Brackets
- C. Screws

2



DETERMINE NUMBER OF BRACKETS

Shade Width	<60"	60" to 96"
# of Brackets	2	3



- Determine the proper position for each bracket. The outside brackets should be no further than 2" from the ends of the cassette.
- The brackets should be securely mounted and equally spaced for the width of the shade.
- It is important that the mounting brackets be installed level and aligned to each other. Shimming may be required.

3 MOUNT THE BRACKETS

CEILING MOUNT

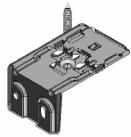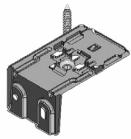


WALL MOUNT

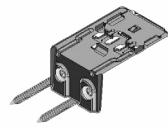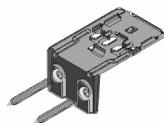

- Place the brackets at the marked locations and align the screw holes.
- Secure each bracket firmly using the appropriate screws.
- Place any remaining brackets, align the screw holes, and secure with screws.
- Ensure all brackets are tightly fastened and level.

4 INSTALL THE SHADE


1. Compress against the ceiling.

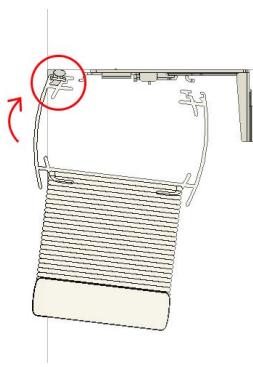


2. Hook the headrail on the bracket.




3. Push it back.

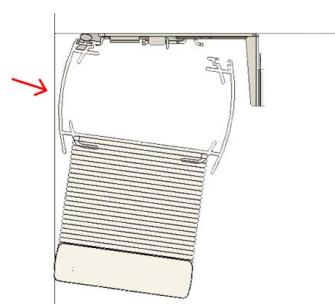

4. Swing the shade back until the back touches the bracket.




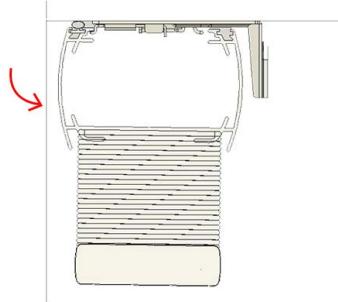


5. Ensure the bracket of the headrail is locked in.

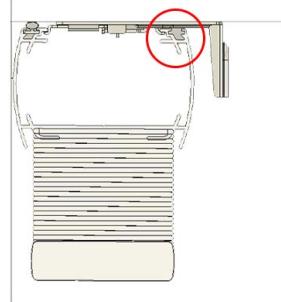

Cellular Shade No-Drill

Installation Instructions

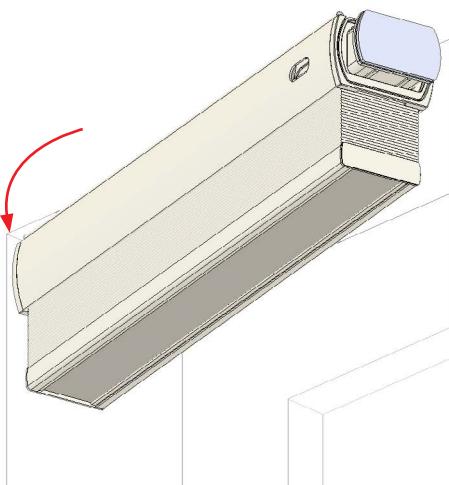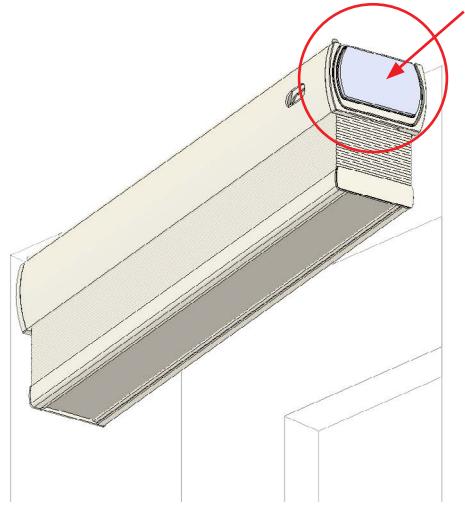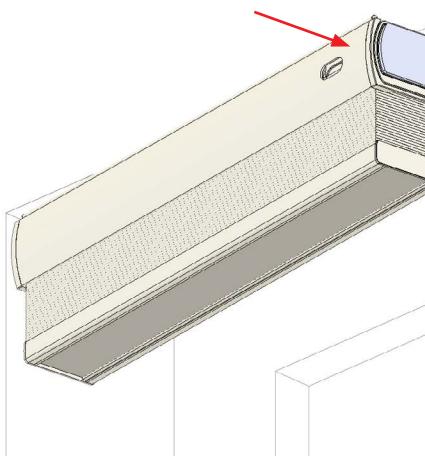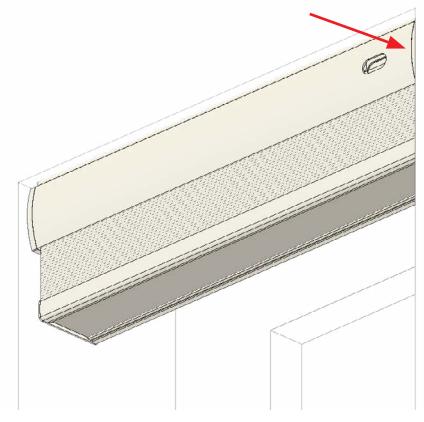
1	Butt the idle (left) side against the inside frame.	2	Compress the spring loaded (right side) inwards & hold.
			
3	Start to push the right side in the frame while holding the spring loaded side in.	4	Fully push the right side in and ensure its aligned straight with the frame
			

Cellular Shade No-Drill

Installation Instructions


5

Insert the provided screwdriver into the slot.

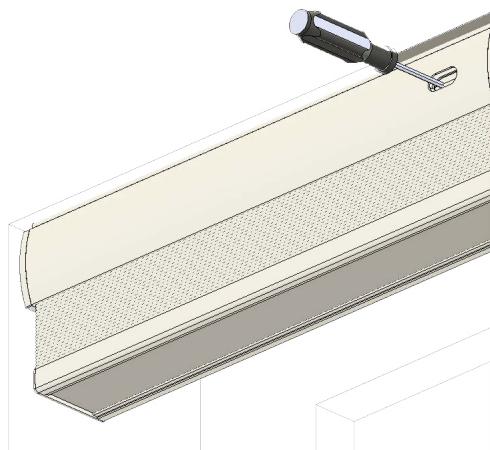


6

Tighten the screw going clockwise until strong resistance is felt.

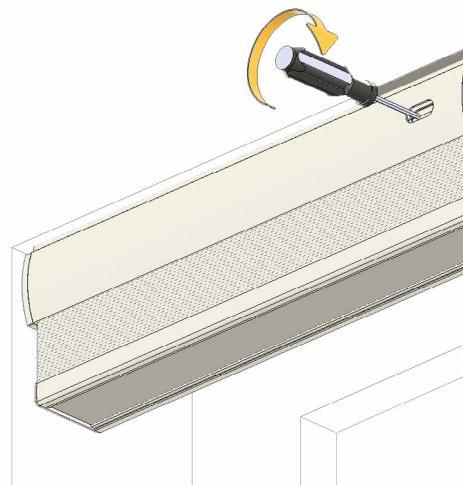

7

Align the cover clip with the front slot.

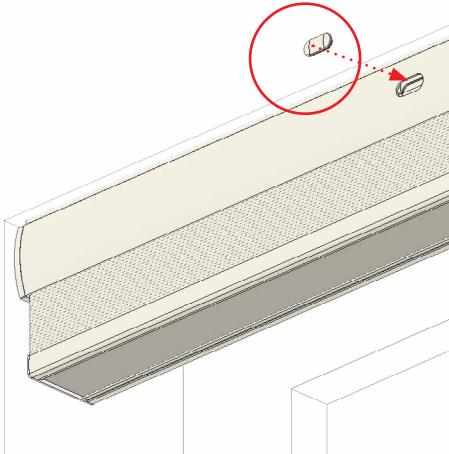

8

Plug the slot with the cover and ensure the shade is fully secured in the frame.

